

# SPA Insulation Cover Support i Installation Instruction

## Box Contains:

- (1) 2 x Center Tube
- (2) 1 x Pivot Arm LH.
- (3) 1 x Pivot Arm RH
- (4) 2 x Upper Support Arm
- (5) 2 x Lower Support Arm with Foam Sleeve.
- (6) 2 x Base
- (7) 1 x Kits Bag.
- (8) 1 x Instruction



## Kits Bag Contains:

- (1) 2 x M10 x 30 S/S Hex Head Bolt.
- (2) 2 x M10 Brass Spacer
- (3) 2 x M10 S/S Lock Nut
- (4) 8 x St5.0 x 30 S/S Flat Head Screw
- (5) 28 x Small Screw Cap.
- (6) 24 x St4.8 x 19 S/S Flat Head Screw
- (7) 1 x 3.2mm Drill Bit
- (8) 1 x Screwdriver Head



**Step 1:** Fix Pivot Arm LH and Pivot Arm RH on Bases with M10 x30 S/S Hex head flat bolts (a), M10 Brass spacers (b), M10 S/S lock nuts (c) (Fig.1- Fig.2).

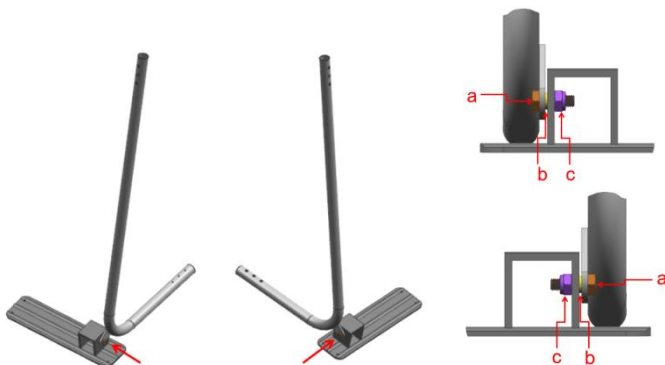


Fig.1

Fig.2

**Step 2:** Insert the Base into the underside of SPA. Adjust it approx.150 mm between the Base's bolt and the side of SPA. Fix 8x St5.0 x 30 S/S flat head screws to lock the Base on the ground. (Fig.3 – Fig.4)

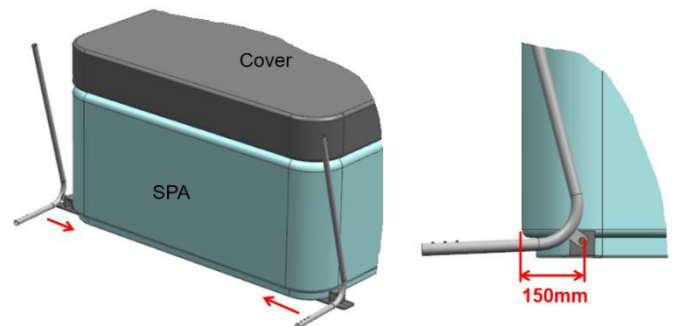


Fig.3

Fig.4

**Step 3:** Insert 2x Lower Support Arm long end into the Center Tube (Fig.5), adjust to suitable width and then insert into the short end of Pivot Arms. Fix with 12x St4.8x19 S/S flat head screws. (Fig.6)

**Step 4:** Insert 2x Upper Arm long end into the Center Tube. (Fig.7), adjust to suitable width and then insert into the long end of Pivot Arms.(Fig.8)

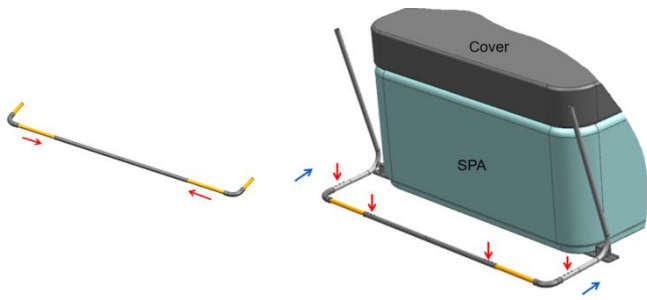


Fig.5

Fig.6

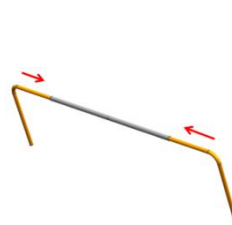


Fig.7

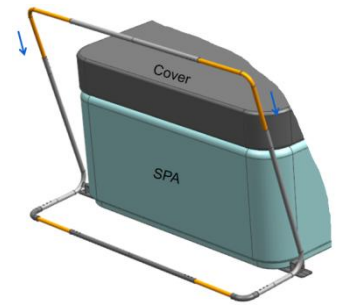


Fig.8

**Step 5:** Swivel Pivot Arms to ensure the Upper Support Arm and the Center Tube at the middle of the SPA Cover.(Fig.9)  
 Fix 6x St4.8x19 S/S flat head screws to lock the Center tube.  
 (Fig.10) Fix 6x St4.8x19 S/S flat head screws to lock the Long end of Upper Support Arms.(Fig.11)  
 Note: screw head direct to the SPA.

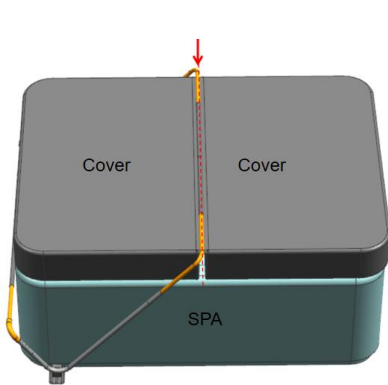


Fig.9



Fig.10

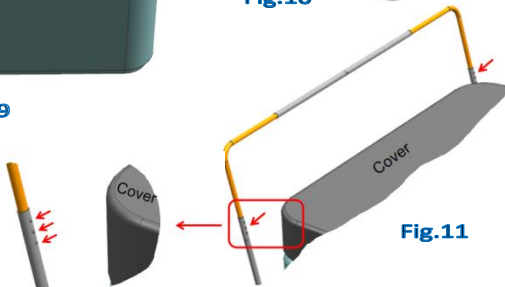


Fig.11

**Step 7:** Flip down the covers vertically. Finish the job.  
 (Fig.14 – Fig.15)

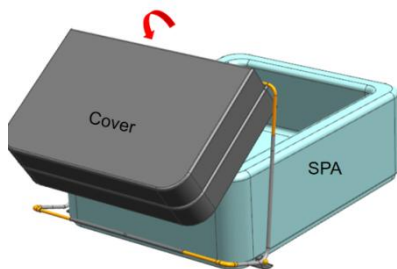


Fig.14

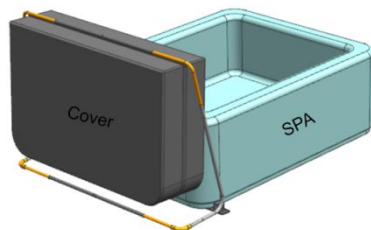


Fig.15

**Step 6:** After fix all screws, then press the screw cap to cover it.  
 (Fig.12) When move the cover, fold it and clip the Upper Support Arm and the Center Tube. Start to flip the cover and the entire Support I outwards.(Fig.13)

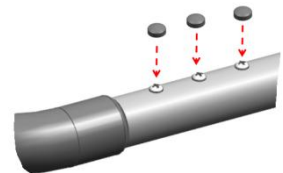


Fig.12

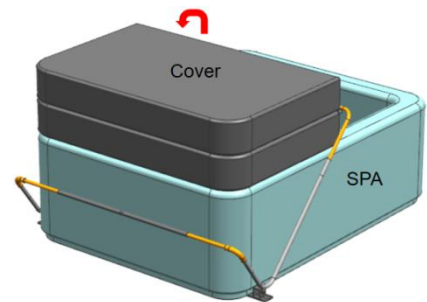


Fig.13

**Step 8:** Repeat these steps conversely to fit the cover on the SPA.

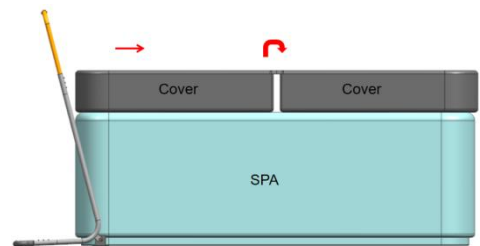


Fig.16

- \* Make sure that you have all parts from the part list.
- \* Note: All left and right directions are from standing in front of Hot Tub.
- \* Note: Scan below QR code to get more installation details .

**CAUTION:** Do not use this cover support i in high winds ( greater than 10 mph). Risk that injury or damage to the SPA could occur if this cover is blown over.